
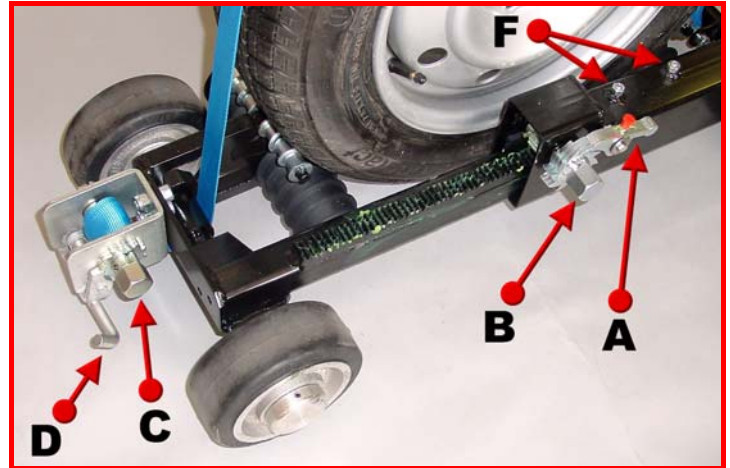


CAR-IMPOUNDING TROLLEYS (PAIR)

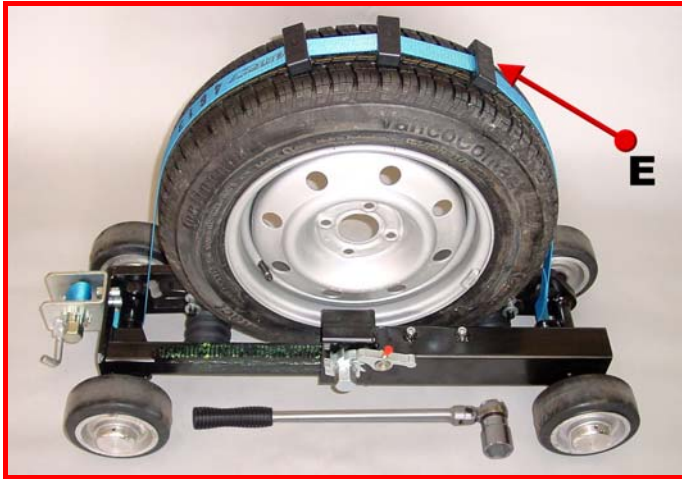

| REFERENCE | ITEM CODE | DESCRIPTION |
|-------------|-----------|--------------------------------|
| Trolley*P30 | J4635G | Car-impounding trolleys (pair) |

- Maximum speed for use on roads : 50 Km/H.
- To open the trolley, move ratchet A to release the pinion.
- When the trolley is opened to the size of the wheel, move ratchet A back onto the pinion.
- Use the socket wrench to tighten pinion B (do not use excessive force when tightening) in order to lift the wheel off the ground.
- Never use an extension to lengthen the handle of the ratchet wrench, as this could cause pinion B's pin to break.
- Put the strap around the wheel and position the stops E according to the diameter of the wheel.
- Use the socket wrench to tighten pinion C, in order to compress the tyre slightly.
- In order to free the wheel from the strap, use the socket wrench to lightly tighten pinion C, press on ratchet D and pull on the strap.
- To free the trolley, use the socket wrench to lightly tighten pinion B in order to be able to move ratchet A, making sure you have got a good grip (beware of feedback effect). Bring the socket wrench handle back into line with the pinion and untighten your grip slightly. The pressure of the load will automatically move the two sides of the trolley apart.
- To compensate for the clearance of the rack in its housing, two screws F (situated above the housing) are used. To ensure smooth functioning, no clearance should remain.
- Regularly grease the trolley and the greaser on ratchet A (using a brush).